

Menu Structure

AutoSafe Release 4



Access Level \geq 2: Access by key
 Access Level 3: Password restricted

- (1) Show Status
 - (1) Fire Alarms
 - (2) Fire Warnings
 - (3) Faults
 - (4) Disablements
 - (5) Detection Zones in Test
 - (6) Activated Outputs
 - (7) Active Sensors
 - (8) Oil & Gas Inhibited Points

- (1) Detection Zones
- (2) Points
- (3) Fire Alarm Devices
- (4) Fire Alarm Routing Equipment
- (5) Outputs
- (6) Fault Warning Routing Equipment
- (7) Immediate Output Actioning
- (8) All

- (2) Disable
 - (1) Detection Zones
 - (2) Points
 - (3) Fire Alarm Devices
 - (4) Fire Alarm Routing Equipment
 - (5) Outputs
 - (6) Fault Warning Routing Equipment
 - (7) Carriers
 - (8) Immediate Output Actioning

- (1) Door Control Units
- (2) Low Location Light Units
- (3) Standard Control Units
- (4) Other Outputs
- (5) Fire Alarm Devices
- (6) Fire Alarm Routing Equipment
- (7) Fault Warning Routing Equipment
- (8) All

- (3) Enable
 - (1) Detection Zones
 - (2) Points
 - (3) Fire Alarm Devices
 - (4) Fire Alarm Routing Equipment
 - (5) Outputs
 - (6) Fault Warning Routing Equipment
 - (7) Carriers
 - (8) Immediate Output Actioning

- (1) Single Unit
- (2) All in Alarm Zone
- (1) Single Output
- (2) All in Operation Zone

- (4) System
 - (1) Date and Time
 - (2) Information
 - (3) Access Level 3
 - (4) Printer
 - (5) Change Language
 - (6) Initialize
 - (7) Cancel Inhibited Points
 - (8) Day / Night Timers

- (1) Enter Access Level 3 – (password)
- (2) Leave Access Level 3
- (3) Set Password
- (1) Paper Feed
- (1) Start
- (2) Stop
- (3) Show Running Timers

- (5) Service
 - (1) Test
 - (2) Log
 - (3) Loop Commands
 - (4) Report
 - (5) Upgrade
 - (6) Remote Access
 - (7) Dual Safety
 - (8) Oil & Gas Commands

- (1) Detection Zone Test (EN 54)
- (2) Output Test
- (1) Fire Alarms
- (2) Prealarms
- (3) Early Warnings
- (4) Faults
- (5) Disable / Enable
- (6) User Operations
- (7) Tests
- (8) All Events
- (9) Log Setup
- (1) Disable Loop
- (2) Enable Loop
- (1) SV-Fault
- (2) Polluted
- (3) SV report to USB
- (4) View SV Report Status

- (1) Enter Test Mode
- (2) Leave Test Mode
- (1) Manual Test On
- (2) Manual Test Off
- (1) Fire Alarm Devices
- (2) Fire Alarm Routing Equipment
- (3) Fault Warning Routing Equipment
- (4) Other Outputs
- (1) Read Parameters
- (2) Read Filter
- (3) Clear Log
- (1) Upgrade SW
- (2) Upgrade Config
- (3) Export Config
- (4) Export Log
- (5) View Upgrade Status
- (6) Reboot System

- (1) Inhibit Point
- (2) Cancel Inhibit Point
- (3) Set Alarm Limits
- (4) Get Measurement Values

- (1) Web Access On
- (2) Web Access Off
- (1) Transfer to Primary
- (2) Transfer to Secondary